WALK THE CUSTOMER THROUGH EACH OF THE FOLLOWING KEY DELIVERY FEATURES

☐ CLIMATE CONTROL - page 16 – 17

☐ HOW TO OPERATE DEFROST - page 17

1. Press the front defrost button.
2. Set to warmest temperature setting.
3. Set to highest fan speed.

☐ BLUETOOTH – page 18, 22-23

- Show phone compatibility website: www.hyundaiusa.com/bluetooth
- Make a test call using Bluetooth with the customer's phone.
- Demonstrate Voice Recognition (VR).

☐ WINDSHEILD WIPER/WASHER – page 08

- To activate wipers move the switch down to one of the three positions (AUTO, LO, HI)
- To adjust "AUTO" speed move control knob.
- To spray washer fluid pull lever toward you
- Push lever up for a single wiper pass

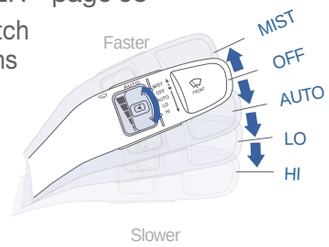

☐ CLOCK – page 10

- Demonstrate how to set clock (including daylight savings setting for Navigation equipped vehicles)

☐ BLUE LINK – pages 20-21

- Assist with creating MyHyundai.com account
- Assist with Blue Link enrollment

  Show Blue Link Users Manual & tear out Voice Commands/Quick Tip Card
- Encourage customers to press the Blue link button after enrollment to initiate Welcome Call

MAINTENANCE

Scheduled Maintenance	Normal Usage		Severe Usage*	
Engine Oil & Filter*	Replace	7,500 or 12 mos.	Replace	3,750 or 6 mos.
Tire Rotation	Perform	7,500	Perform	7,500
Air Cleaner Filter	Inspect Replace	7,500 30,000	Replace	More Frequently
Vacuum Hose	Inspect	7,500	Inspect	Same As Normal
Climate Control Air Filter (For Evaporator and Blower Unit)	Replace	15,000	Replace	More Frequently
Air Conditioning Refrigerant	Inspect	15,000	Inspect	Same As Normal
Brake Hoses & Lines	Inspect	15,000	Inspect	Same As Normal
Drive Shafts & Boots	Inspect	15,000	Inspect	7,500
Electronic Throttle Control	Inspect	15,000	Inspect	Same As Normal
Exhaust Pipe & Muffler	Inspect	15,000	Inspect	Same As Normal
Front Disc Brake/Pads, Calipers & Rotors	Inspect	15,000	Inspect	More Frequently
Propeller Shaft	Inspect	15,000	Inspect	7,500 or 6 mos.
Steering Gear Box, Linkage & Boots, Lower Arm Ball Joint, Upper Arm Ball Joint	Inspect	15,000	Inspect	More Frequently
Suspension Mounting Bolts	Inspect	15,000	Inspect	Same As Normal
Brake Fluid	Inspect	30,000	Inspect	Same As Normal
Fuel Filter	Inspect	30,000	Inspect	Same As Normal
Fuel Lines, Fuel Hoses & Connections	Inspect	30,000	Inspect	Same As Normal
Fuel Tank Air Filter	Inspect	30,000	Inspect	Same As Normal
Rear Disc Brake/Pads, Parking Brake	Inspect	30,000	Inspect	More Frequently
Vapor Hose, Fuel Tank & Fuel Filler Cap	Inspect	30,000	Inspect	Same As Normal
Valve Clearance	Inspect	60,000	Inspect	Same As Normal
Drive Belts (Alt, A/C)	1st 60,000 or 48 mos. Addl. Inspect 15,000 or 12 mos.		Inspect	Same As Normal
Spark Plugs (Iridium Coated)	Replace	105,000	Replace	More Frequently
Coolant	1st Replace 120,000 mos. Addl. Replace 30,000 or 24 mos.		Replace	Same As Normal
Automatic Transaxle Fluid	No check, No service required		Replace	60,000

*Check the engine oil regularly between recommended oil change. Hyundai recommends Quaker State oil.

*See Owner's Manual for details.

Looking for more detailed information? This Quick Reference Guide does not replace your vehicle's Owner's Manual. If you require additional information or are unsure of a specific item, you should always refer to the vehicle's Owner's Manual or contact your authorized Hyundai dealer.

The information contained in this Quick Reference Guide was correct at the time of printing; however, specifications and equipment can change without notice. No warranty or guarantee is being extended in this Quick Reference Guide, and Hyundai reserves the right to change product specifications and equipment at any time without incurring obligations. Some vehicles are shown with optional equipment. Specifications apply to U.S. vehicles only. Please contact your Hyundai dealer for current vehicle specifications.

NP150-N2014
(Rev 10/20/14)
Printing 10/23/14

HYUNDAI **EQUUS**

Quick Reference Guide

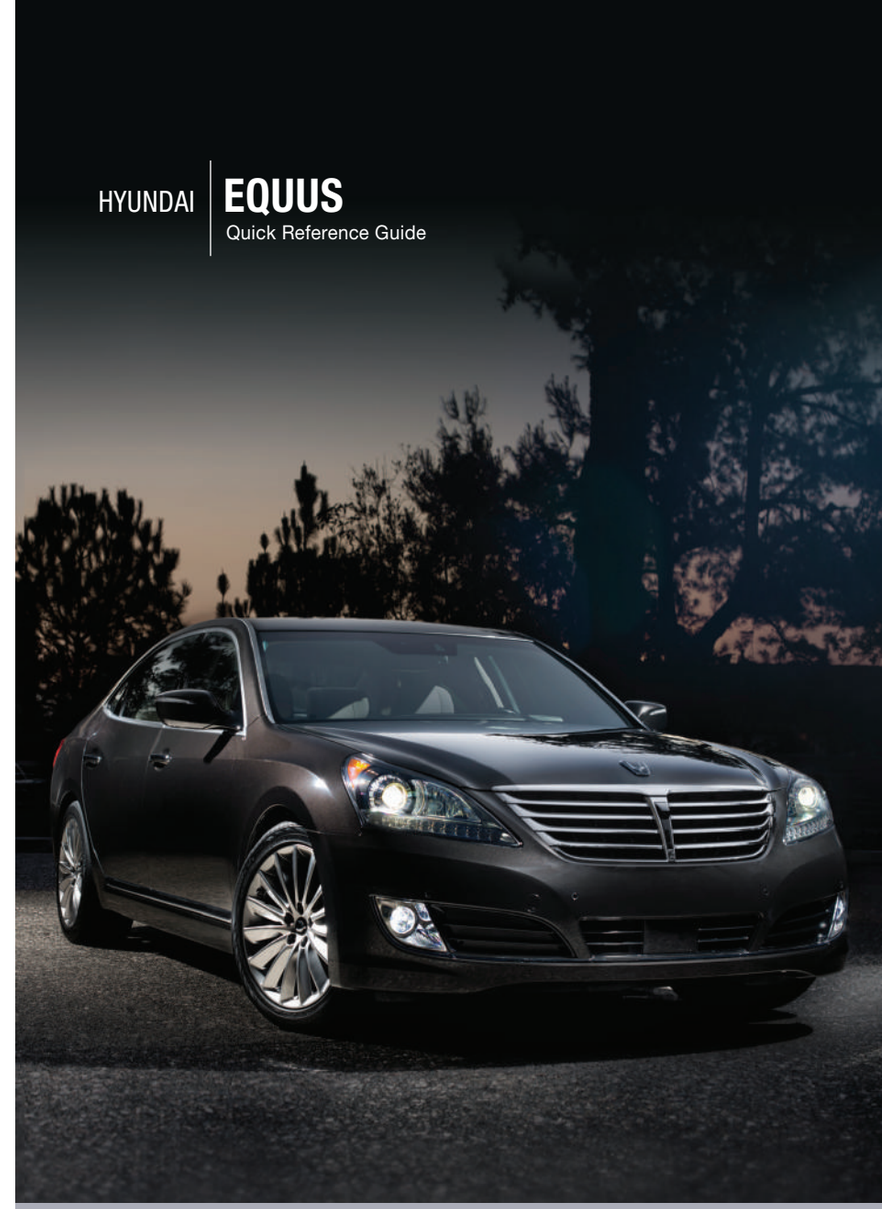

www.hyundai.com

HYUNDAI
NEW THINKING.
NEW POSSIBILITIES.

Roadside Assistance: 1-800-243-7766
Consumer Affairs: 1-800-633-5151
XM® Radio: 1-800-967-2346
Blue Link: 1-855-2BLUELINK (1-855-225-8354)

Table of contents

GETTING STARTED

Driver position memory system 03
Front seat adjustment 03
Headrest adjustment 04
Seat belt adjustment 04
Smart key 02

FEATURES AND CONTROLS

Adaptive front lighting system (AFLS) 07
Auto hold 34
Aux, USB, and iPod® port 37
Blind spot detection system (BSD) 36
Child-protector rear door lock 29
Climate control 16-17
Clock adjustment 10
Cruise control system 26
Drive mode integrated control system 37
Driver's main controls 06
Electronic controlled suspension (ECS) 35
Electric parking brake (EPB) 34
Electronic stability control (ESC) 32
Fuel filler door 05
Head up display (HUD) 35
Headlights and fog lights 07
Heated steering wheel 05
HomeLink wireless control system 11
Instrument cluster 12-15
Instrument panel illumination 13-15
Interior lights 10
Lane departure warning system (LDWS) 36
Multi-view camera system 33
Parking assist system (PAS) 32
Rear door window curtain 06
Rearview camera 33
Seat warmer and cooler 29
Steering wheel adjustments 05
Sunroof 09
Tire pressure monitoring system (TPMS) 31
Transmission 30
Trip computer 13-15
Trunk 27-28
Trunk lock button 28
Wiper and washer 08

MULTIMEDIA

Audio Controls 24
Blue Link Telematics System 20-21
Bluetooth Operational Tips 22-23
Bluetooth Phone Pairing 18
Central control panel 25
Navigation 24
Steering wheel audio controls 19

*Some vehicles may not be equipped with all the listed features.

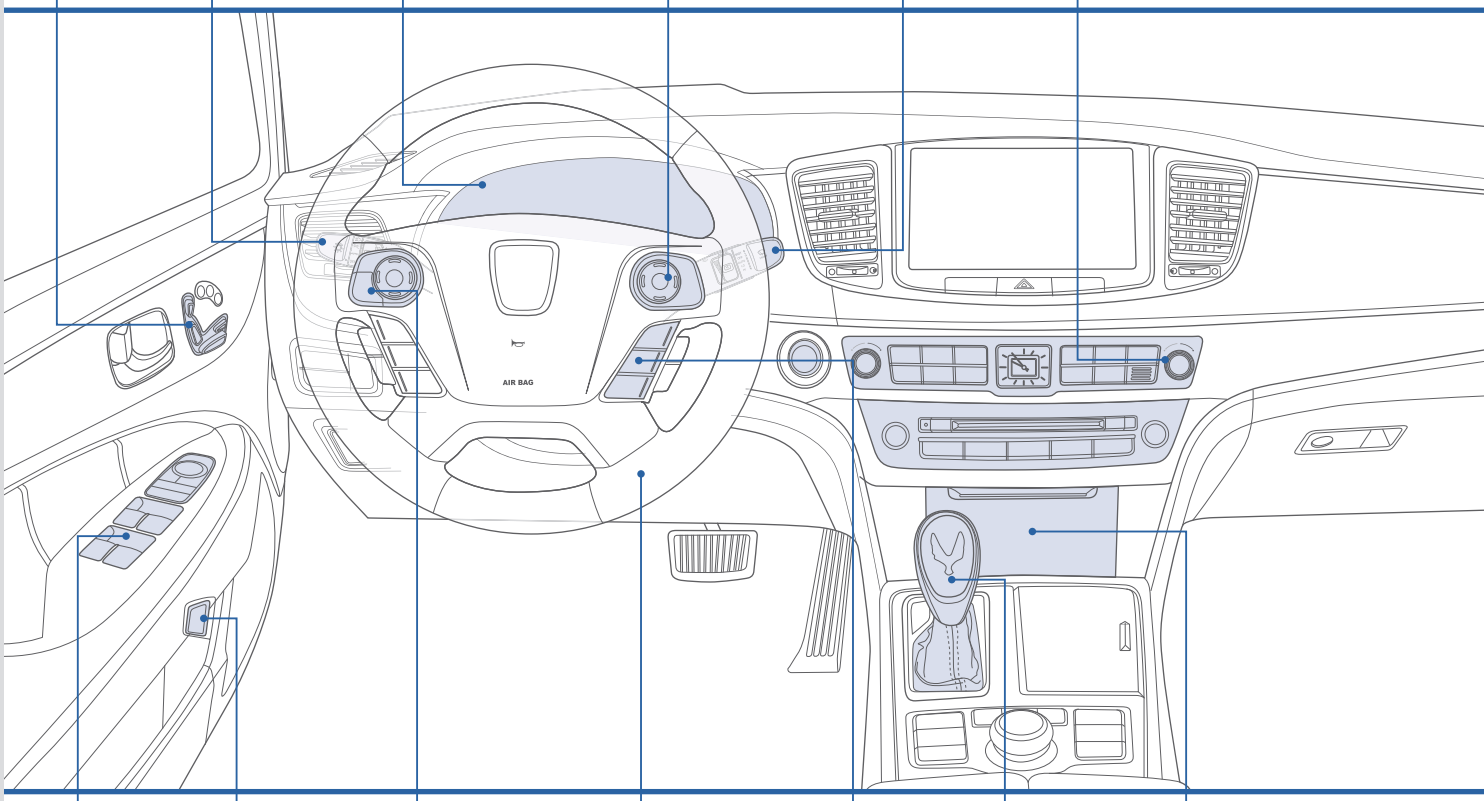

Front seat adjustment
Page 03

Headlights and fog lights
Page 07

Instrument cluster
Pages 12-15

Trip computer and user settings
Pages 13,15

Wiper and washer
Page 08

Climate control
Pages 16-17

Driver's main controls
Page 06

Fuel filler door
Page 05

Audio control
Page 24

Steering wheel adjustments
Page 05

Smart cruise control system
Page 26

Transmission
Page 30

AUX, USB, and iPod® port
Page 37

Use this Quick Reference Guide to learn about the features that will enhance your enjoyment of your Hyundai. More detailed information about these features is available in your Owner's Manual.

⚠ WARNING!

To reduce the risk of serious injury to yourself and others, read and understand the important SAFETY INFORMATION in your Owner's Manual.

SMART KEY

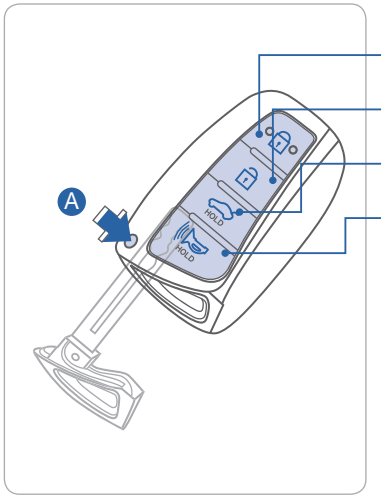

Lock

Unlock

Trunk Open

Panic

Mechanical key

Press and hold the release button Ⓐ and remove the key.

NOTE

User-selectable option; see Owner's Manual for more detail.

Card type

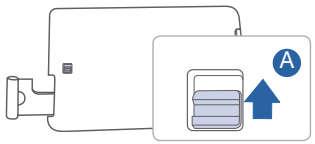

Card type mechanical key

Push and hold the release button Ⓐ and remove the key.

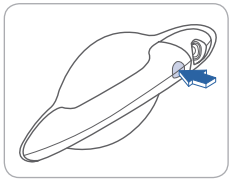

Lock

Press the door handle lock button.

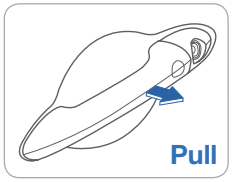

Unlock

Pull handel to unlock. Smart key must be within range.

NOTE Lock button will not unlock door.
If accidently pressed, wait 3 seconds to pull handle.

FRONT SEAT ADJUSTMENT

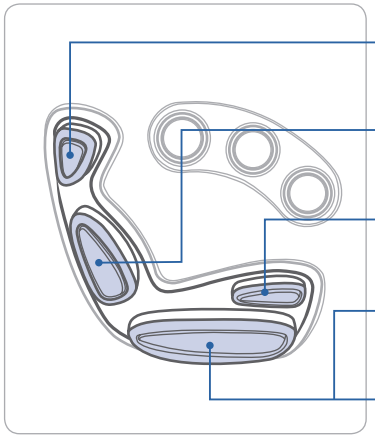

Headrest adjustment

Seatback angle

Cushion length adjustment (for driver's seat)

Forward / backward

Seat cushion height

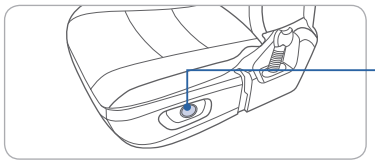

Lumbar support

(for driver's seat)



DRIVER POSITION MEMORY SYSTEM

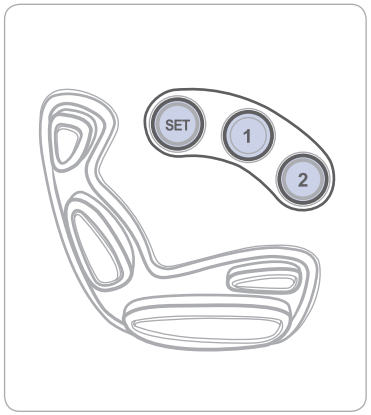

Vehicle must be in Park.

Storing seat position

1. Adjust the driver's seat, outside rearview mirrors, and steering wheel.
2. Press the SET button. The system will beep once.
3. Press one of the memory buttons (1 or 2) within 5 seconds.

Recalling

Press the desired memory button (1 or 2). The system will beep once.

HEADREST ADJUSTMENT

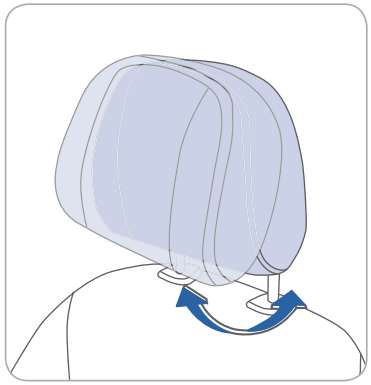

Forward or Backward adjustment

To adjust headrest forward or backward, slide headrest forward or push back.

SEAT BELT ADJUSTMENT (Front seat)

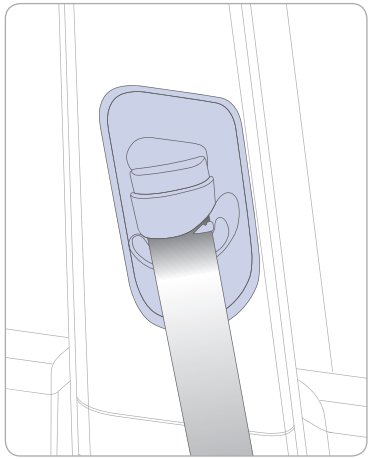

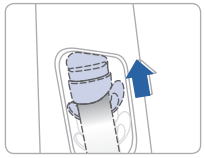

Pull up to raise.

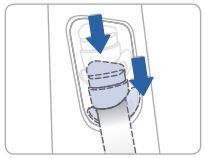

Press button and push down to lower.

STEERING WHEEL ADJUSTMENTS

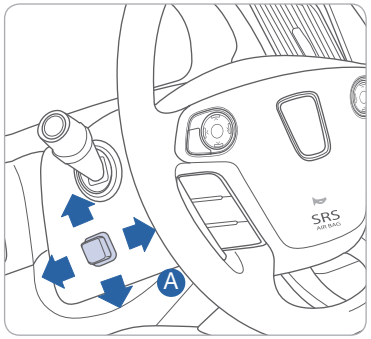

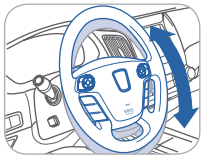

Tilt

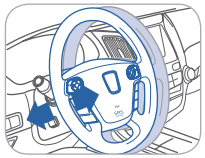

Telescope

NOTE Do not adjust while driving.

Toggle switch Ⓐ to adjust steering wheel.

HEATED STEERING WHEEL

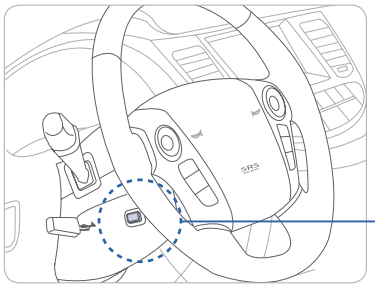

Pressing the heated steering wheel button warms the steering wheel. The indicator on the button is illuminated.

Heated steering wheel button

FUEL FILLER DOOR

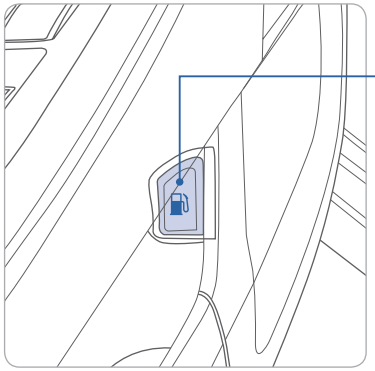

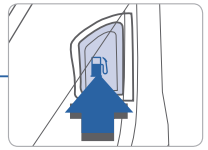

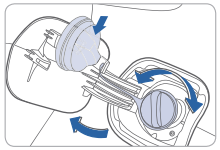

NOTE

After adding fuel, always reinstall the fuel cap onto the filler neck by rotating it clockwise until it clicks one time. Failure to do this may result in the Check Engine Light illuminating.

Check the engine oil regularly between recommended oil changes.

DRIVER'S MAIN CONTROLS

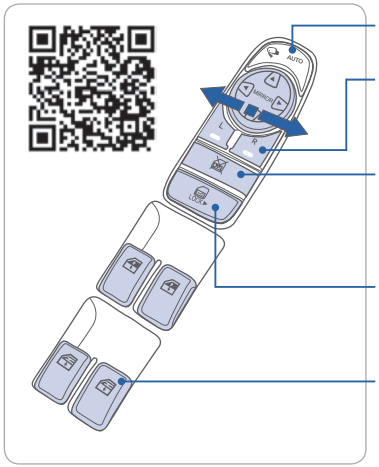

Folding outside mirrors
Press to fold or unfold mirrors.

Outside rearview mirror
Press L (left) or R (right) on the switch to adjust outside rearview mirror.

Power window lock switch
Disables the power window switches on the rear passenger doors only.

Central door lock switch
All doors will lock/unlock.

Window auto down/up
Press past detent to automatically open/close window.

REAR DOOR WINDOW CURTAIN

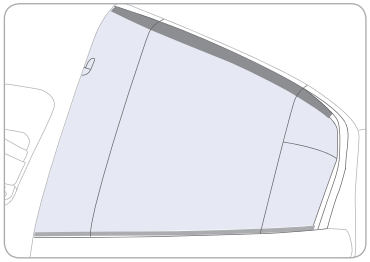

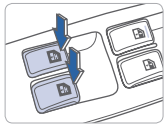

(Driver's door)

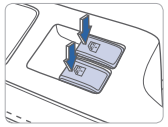

(Rear doors)

With windows closed, press
to raise or lower door curtain.

REAR WINDOW CURTAIN

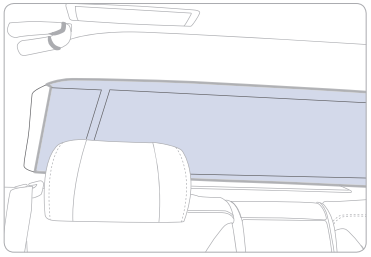

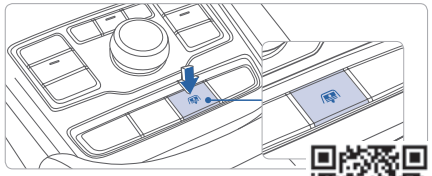

Press the button to lower.
Press the button again
to raise.

HEADLIGHTS AND FOG LIGHTS

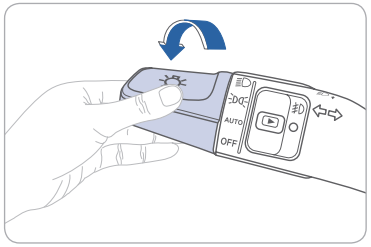

Headlight on

Parking lights on

AUTO Auto headlights on

OFF Lights off

NOTE Daytime running lights will remain on.

Headlight delay
Headlights may stay on for 15 seconds after exiting and locking vehicle. Press remote lock button twice to turn headlights off. See Owner's Manual for more detail.

Turn signals and lane change signals

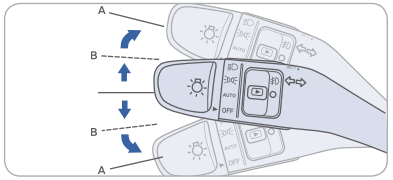

Flashing headlights

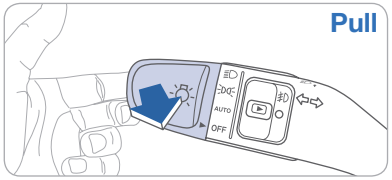

High beam

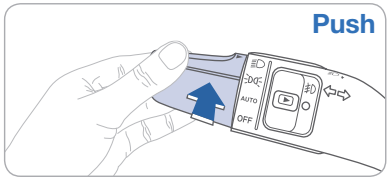

Fog light

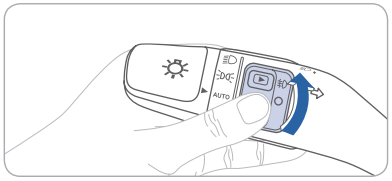

NOTE Turn signals will blink 3 times after stalk is released.

ADAPTIVE FRONT LIGHTING SYSTEM (AFLS)

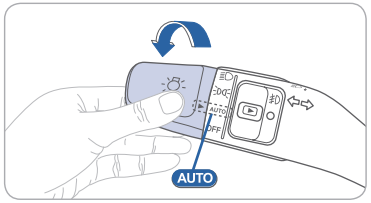

AFLS uses the steering angle and vehicle speed to help keep your field of vision wide by swiveling and leveling the headlamp.

- To turn AFLS on, turn the knob to the AUTO position.
- To turn AFLS off, turn the knob back to the former position.

WIPER AND WASHER

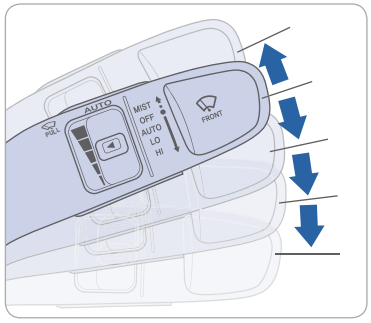

MIST - Single wipe

OFF - Off

AUTO - AUTO control wipe

LO - Normal wiper speed

HI - Fast wiper speed

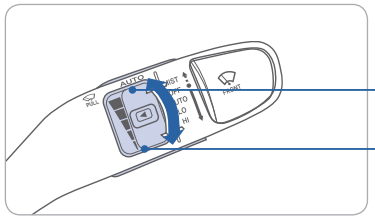

Auto control wipe interval adjustment

Fast wiper speed

Slow wiper speed

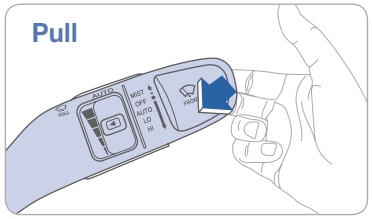

Front windshield wash with brief wipes

SUNROOF

Sliding the sunroof

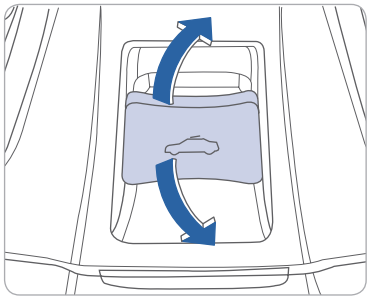



To Open

Press switch rearward.



To Close

Press switch forward past the detent to close completely.

Tilting the sunroof

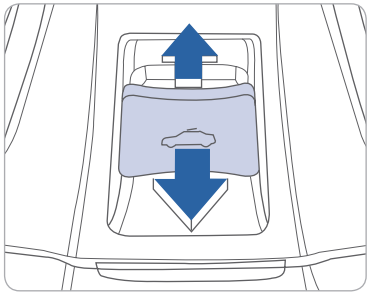



To Tilt

Press the switch up.

To Close

Pull the switch down.

INTERIOR LIGHTS

Map and room lamp

Front

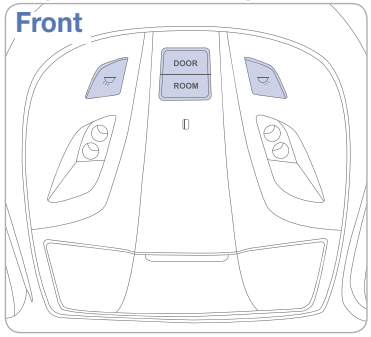

Turns the map lamp on or off

DOOR The front or rear room lamp will illuminate when the doors are open or unlocked with the smart key.

ROOM Turns the room lamp on or off

Rear



Turns the map lamp on or off

ROOM Turns the room lamp on or off

CLOCK ADJUSTMENT

1. Press "HOME" button.

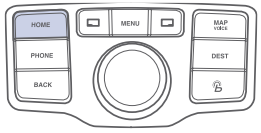

2. Select INFO/SETUP.
3. Press "Settings" icon on the screen, then press "Clock".
4. To set your preferred Time Setting:
   - Check "GPS Time" to adjust the time automatically.
   - Press "Time Format" to adjust the clock manually.
   - If "Daylight Savings Time" is selected, the clock will be adjusted forward by one hour.

NOTE: Once the digital clock is adjusted, the analog clock will be updated accordingly.



HOMELINK WIRELESS CONTROL SYSTEM

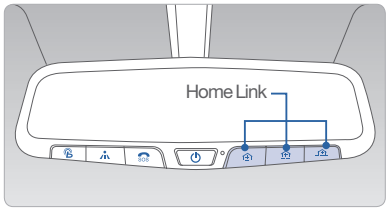

Standard programming

To program most devices, follow these instructions:

1. For first-time programming, press and hold the two outside buttons, HomeLink® Channel 1 and Channel 3 buttons, until the indicator light begins to flash (after 20 seconds). Release both buttons. Do not hold the buttons for longer than 30 seconds.
2. Position the end of your hand-held transmitter 1-3 inches (2-8 cm) away from the HomeLink® buttons while keeping the indicator light in view.
3. Simultaneously press and hold both the HomeLink® and hand-held transmitter button. DO NOT release the buttons until step 4 has been completed.
4. While continuing to hold the buttons, the red indicator Status LED will flash slowly and then rapidly after HomeLink® successfully programs to the frequency signal from the hand-held transmitter. Release both buttons.

For detailed instructions, refer to your Owner's Manual or visit www.homelink.com.

Type A

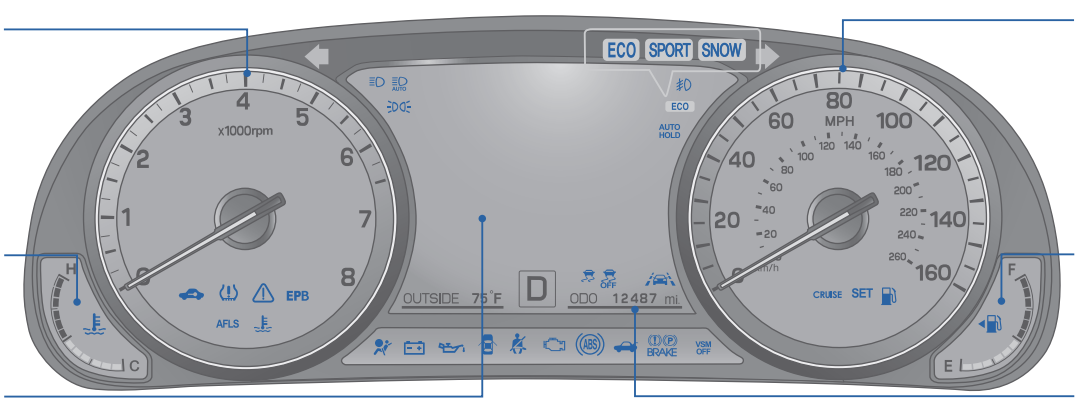

WARNINGS AND INDICATORS

Air bag warning light	Seat belt warning light	BRAKE Parking brake & Brake fluid warning light
ABS warning light	ABS BRAKE Electronic Brake Force Distribution (EBD) System warning light	
Malfunction Indicator Lamp (MIL)	Charging system warning light	Engine coolant temperature warning light
Engine oil pressure warning light	Low fuel level warning light	Low Tire Pressure warning light
Door open warning light	Trunk open warning light	AFLS Adaptive Front Lighting System (AFLS) warning light
EPB Electric Parking Brake (EPB) warning light	Master warning light	Electronic Stability Control (ESC) indicator
OFF Electronic Stability Control (ESC) OFF indicator	Low beam indicator	Immobilizer indicator
Turn signal indicator	High beam indicator	Light ON indicator
Front fog light indicator	CRUISE Cruise indicator	SET Cruise SET indicator
AUTO HOLD AUTO HOLD indicator	Lane departure warning	VSM OFF VSM OFF indicator
SPORT SNOW SPORT/SNOW mode light	ECO ECO indicator	

INSTRUMENT PANEL ILLUMINATION

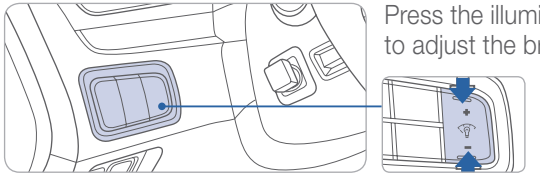

Press the illumination control button to adjust the brightness.

TRIP COMPUTER

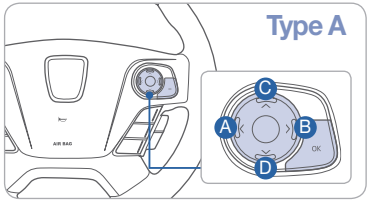

1. Select by pressing A ‹ or B ›
2. Press C ^ or D ˇ to display Tripmeter.

Fuel Economy → Tripmeter A/B

Type B (Full LCD Display)

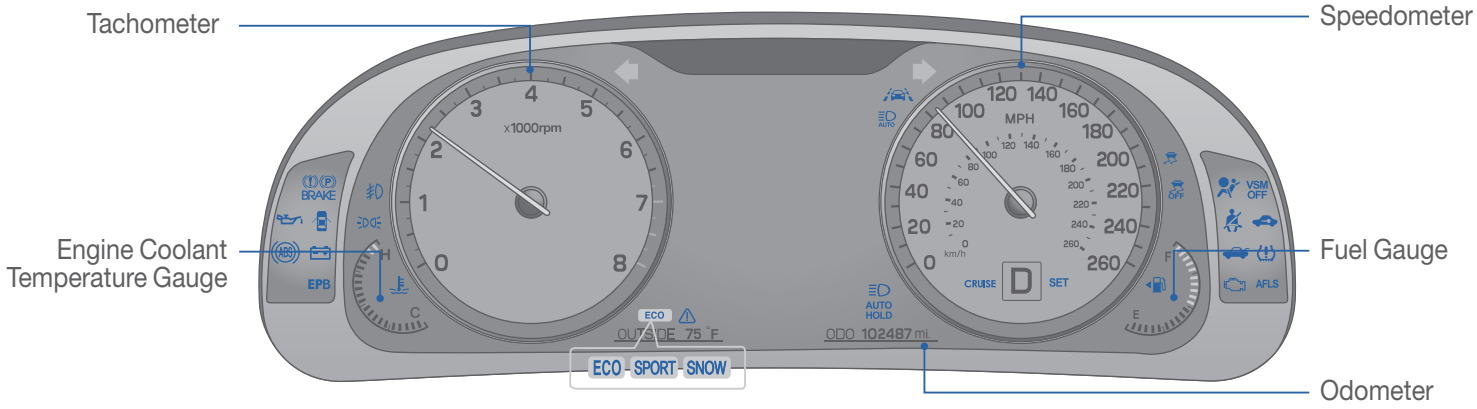

WARNINGS AND INDICATORS

Air bag warning light	Seat belt warning light	Parking brake & Brake fluid warning light
ABS warning light	Electronic Brake Force Distribution (EBD) System warning light	
Malfunction Indicator Lamp (MIL)	Charging system warning light	Engine coolant temperature warning light
Engine oil pressure warning light	Low fuel level warning light	Low Tire Pressure warning light
Door open warning light	Trunk open warning light	Adaptive Front Lighting System (AFLS) warning light
Electric Parking Brake (EPB) warning light	Master warning light	Electronic Stability Control (ESC) indicator
Electronic Stability Control (ESC) OFF indicator	Low beam indicator	Immobilizer indicator
Turn signal indicator	High beam indicator	Light ON indicator
Front fog light indicator	Cruise indicator	Cruise SET indicator
AUTO HOLD indicator	Lane departure warning	VSM OFF indicator
SPORT SNOW mode light	ECO indicator	

INSTRUMENT PANEL ILLUMINATION

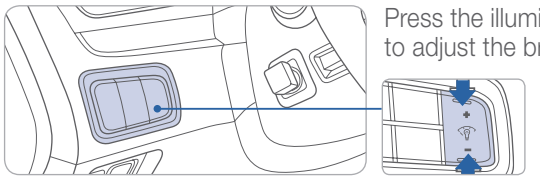

Press the illumination control button to adjust the brightness.

TRIP COMPUTER AND USER SETTINGS

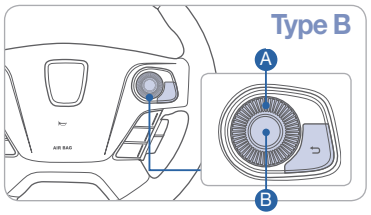

1. Rotate A to .
2. Press B button to select.
3. Rotate A to select Tripmeter screen.

Fuel Economy — Tripmeter A/B

Climate Control

Front

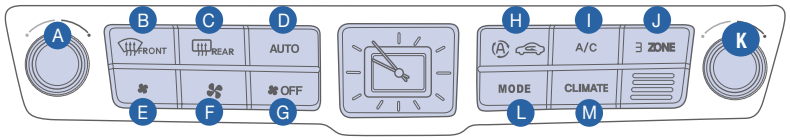

- A Driver's temperature control knob
- B Front windshield defrost button
- C Rear window defrost button
- D AUTO (automatic control) button
- E F Fan speed control button
- G OFF button
- H Air intake control button/ AQS (Air quality system) button
- I Air conditioning button
- J 3 zone (Driver, passenger, and rear side) control button
- K Passenger's temperature control knob
- L Mode selection button
- M Climate information screen selection button

Rear

Type A

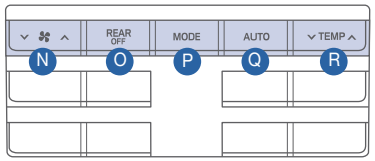

Type B

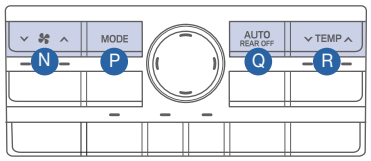



- N Fan speed control button
- O Rear HVAC off button
- P Rear mode selection button
- Q AUTO (automatic control) button
- R Rear side temperature control button
- Q AUTO (automatic control) or off button
- S LCD display

AIR INTAKE CONTROL

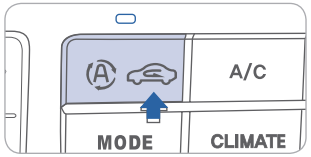

Recirculated air position

Outside (fresh) air position

AUTOMATIC HEATING AND COOLING



1. Press the AUTO button.

2. Set the temperature control to the desired setting.

The modes, fan speeds, air intake, and air-conditioning will be controlled automatically according to the temperature setting.

NOTE

To reduce tendency of the glass fogging, keep the interior surface of the windshield clean by wiping it with a clean cloth and glass cleaner.

SYSTEM OFF MODE

Pressing the OFF button will place the system in the OFF mode.

- Blower will turn off.
- Outside (fresh) air position selected.
- Vented air at last set temperature.

REAR WINDOW DEFROSTER

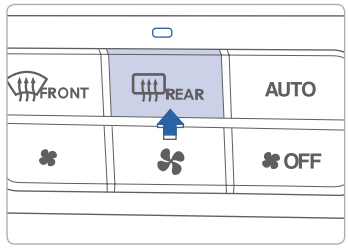

Press to activate/deactivate the rear window defroster.

3 ZONE CONTROL BUTTON

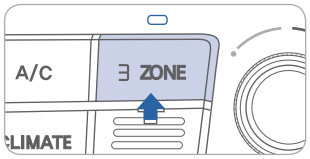

Press the 3 ZONE button to allow independent temperature control of the driver, front passenger, and rear temperature.

MODE SELECTION

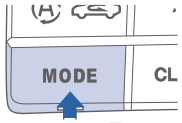

Changes the direction of air flow:

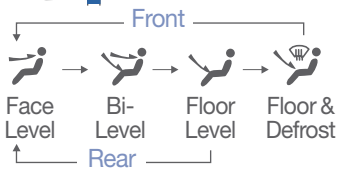

DEFROSTING / DEFOGGING



1. Set the temperature control to the desired setting.



2. Press the front windshield defrost button.
3. Set the fan speed to the highest setting.

BLUETOOTH PHONE PAIRING

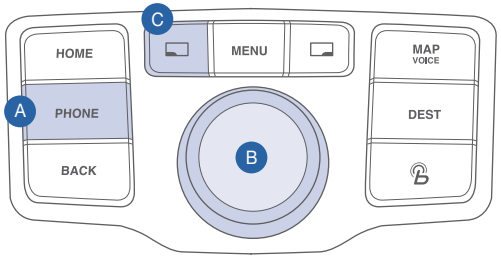

1. Press PHONE button A.
2. Select “Connections” by turning knob B and press knob B to select.
3. Press Left Select button C to select “Add New”.
4. Enable Bluetooth on your phone. Select “EQUUS” on your mobile phone from the Bluetooth list.
5. When prompted, enter the Passkey displayed on the screen.

The contact list display may start with either first or last name depending on the phone make and model.

Please visit https://www.HyundaiUSA.com/Bluetooth for a list of compatible phones tested to work with Hyundai's Bluetooth system.

STEERING WHEEL AUDIO CONTROLS

Audio control

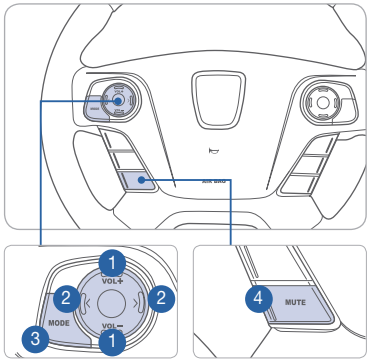

1 **VOLUME**
Raises or lowers speaker volume.

2 **SEEK/PRESET**
Press to change presets.
Press and hold to seek stations.

3 **MODE**
Change the audio source. Press and hold to turn the radio on/off.

4 **MUTE**
Mute the sound.

BLUE LINK TELEMATIC SYSTEM

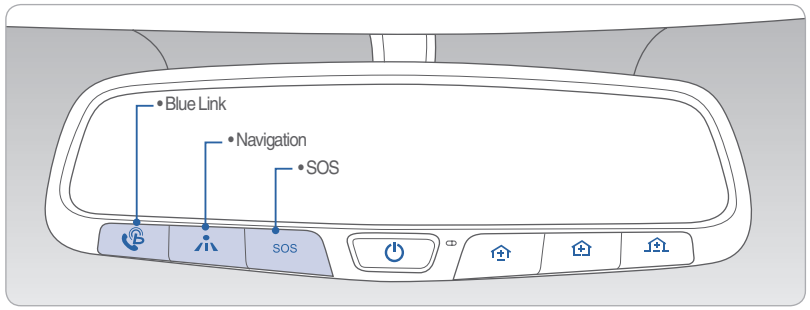

Press the button for access to the voice-response menu of services.
You have two options:

- You can say, “Main Menu” for a listing of main menu choices.
- You can directly select any of the listed menu items by saying its name.

In-Car Voice Response Commands

New Destination
Service Link
Roadside Assistance
Valet Alert
Help
Cancel

- Press the button for navigation-related services.
- Press the SOS button for SOS Emergency Assistance.
- Refer to your Blue Link User’s Manual for detailed information on system operation.
- For immediate assistance with subscription services, please call 1-855-2BLUELINK (1-855-225-8354).
- Please register your Blue Link at www.myhyundai.com.

Blue Link feature availability is dependent upon your Blue Link subscription package(s).

Remote Door Unlock/Lock

Blue Link Mobile App

You can download the Blue Link mobile app to your compatible smart phone from the following sites:

- iPhone® — Apple® App Store
- Android® — Google Play

With this feature, you can lock or unlock your vehicle doors from virtually anywhere by using the Blue Link mobile phone app, by dialing the toll-free number, or by using the Blue Link owner’s website.

- To use this feature, you must have a Blue Link Personal Identification Number (PIN). To create or change your PIN, log on to www.MyHyundai.com.

To Activate Remote Door Unlock/Lock

- By Blue Link Mobile App: Select DOOR UNLOCK or DOOR LOCK, as desired.
  - Enter your Blue Link PIN.
  - The command to lock or unlock your doors will be sent to your vehicle.
- By phone: Dial toll-free 1-855-2-BLUELINK (1-855-225-8354).
- By web site: Log on to www.MyHyundai.com, select Blue Link.
  - Select Remote Services, then Remote Door Unlock/Lock.
  - Input your Blue Link PIN. (If you need time to get to your vehicle, specify a time delay before your vehicle will be unlocked.)

BLUETOOTH OPERATIONAL TIPS

In the following situations you or the other party may have difficulty hearing each other:

1. When the Bluetooth volume is at a high level. Keep the Bluetooth volume to a low level to reduce distortion and echo.
2. When driving on a rough road, high speeds and/or with the window open.
3. When the air conditioning vents are facing the microphone and/or when the air conditioning fan is at the max speed.

Steering wheel bluetooth control

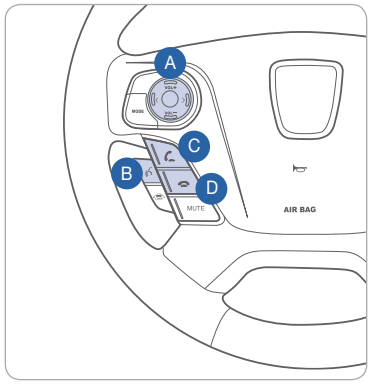

A **VOLUME**
Raises or lowers speaker volume.

B **TALK**
Activates voice recognition.

C **CALL**
Places and transfers calls.

D **END**
Ends calls or cancels functions.

Voice Recognition Tips

Your vehicle is equipped with Voice Recognition technology which allows drivers to operate their phones without having to take their eyes of the road to minimize distractions.

Voice recognition performance may be affected if driving with windows and sun roof open; when the heating-cooling system is on; when passing a tunnel or when driving on rugged and uneven roads.

To Answer a Call:
- Press button on the steering wheel.

To Reject a Call:
- Press button on the steering wheel.

To Adjust Ring Volume:
- Use the VOLUME buttons on the steering wheel.

To Transfer a Call to the Phone (Secret Call):
- Press and hold button on the steering wheel until the audio system transfers a call to the phone.

To Finish a Call:
- Press button on the steering wheel.

Making a call using voice recognition:

The menu tree identifies available voice recognition Bluetooth® functions.

Calling by Name:
1. Press button.
2. Say the following command:
   - "Call <John>": Connects the call to John.
   - "Call <John> on <Mobile/Home/Office>": Connects the call to John's Mobile, Home, or Office phone number.

Dialing by Number:
1. Press button.
2. Say "Call".
3. Say "By number" when prompted.
4. Say desired phone numbers.
5. Say "Dial" to complete the number and make a call.

For complete list of commands, refer to your Owner's Manual.

Command	Function
More Help	Provides guidance on commands that can be used anywhere in the system
Help	Provides guidance on commands that can be used within the current mode.
Calls <Name>	Calls <Name> saved in Contacts. Ex) Call "John"
Dial <Number>	Call can be made by dialing the spoken numbers. Ex) Call "123"
Phone	Provides guidance on Phone related commands. After saying this command, say "Call History", "Contacts" to execute corresponding functions.
Call History	Displays the Call History screen.
Contacts (Call by Name	Displays the Contacts screen. After saying this command, say the name of a contact saved in the Contacts to automatically connect the cell.
Dial Number	Display the Dial number screen. After saying this command, you can say the number what you want to call.

AUDIO CONTROLS

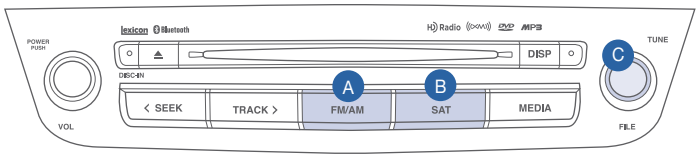

Tuning/listening to channels

1. Press FM/AM (A) or SAT (B).
2. Rotate TUNE knob (C) to desired channel.

NOTE

A clear view of the southern sky helps to ensure XM® radio reception.

NAVIGATION

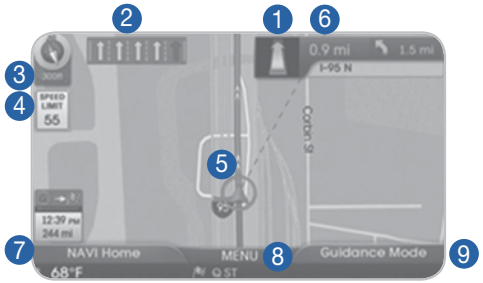

1. Car direction and Scale
2. Lane Info
3. Preliminary Guidance
4. Speed Limit
5. Car Position Mark
6. Remaining Distance
7. NAVI Home
8. [MENU] button
9. Guidance Mode

CENTRAL CONTROL PANEL

The central control panel is located in the vehicle center console. It comprises the controller and the main function buttons.

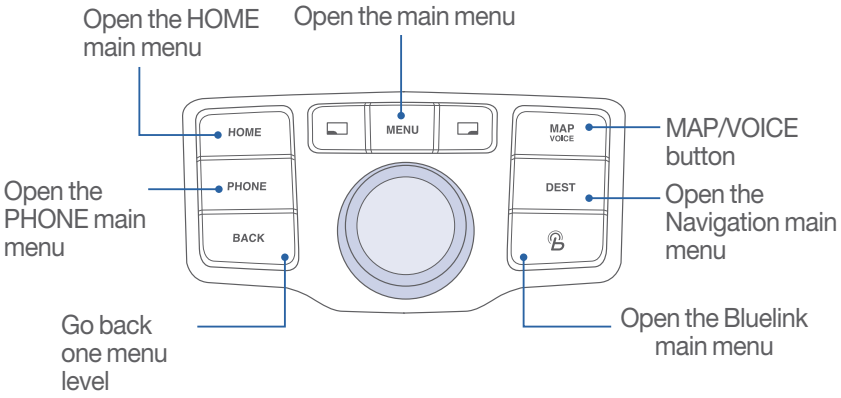

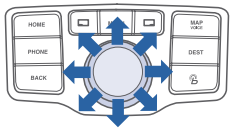

Scrolling through Controller

Move the focus or scroll through the navigation map.

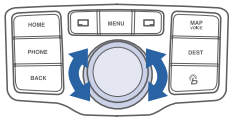

Turning the controller

Move the focus, or zoom in/out the navigation map.

Pressing the controller

Start/Select the focused feature.

CRUISE CONTROL SYSTEM

Smart cruise control system

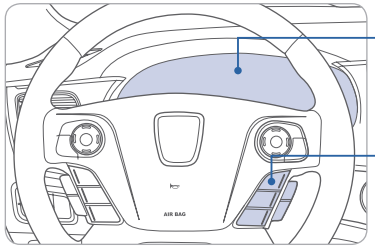

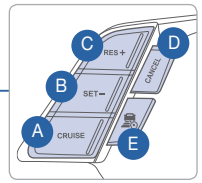

CRUISE
Cruise indicator

SET
Cruise set indicator

Smart cruise control system allows you to set the distance from the vehicle ahead and maintain the selected distance even if you do not press the accelerator or brake pedal.

To set a cruising speed

1. Press CRUISE button (A) and the CRUISE indicator will illuminate in the instrument cluster. Accelerate to desired cruising speed.
2. Press SET- button (B) and remove your foot from the accelerator pedal.

To Accelerate or Decelerate

Press RES+ button (C) to increase set cruising speed.
Press SET- button (B) to decrease set cruising speed.

To Cancel Cruising Speed

Pull CANCEL button (D) or depress brake pedal.

To Set Vehicle-to-Vehicle Distance

Pull the button (E) to select vehicle-to-vehicle distance.
Each time the distance changes as follows;
Distance 4 › Distance 3 › Distance 2 › Distance 1

POWER TRUNK

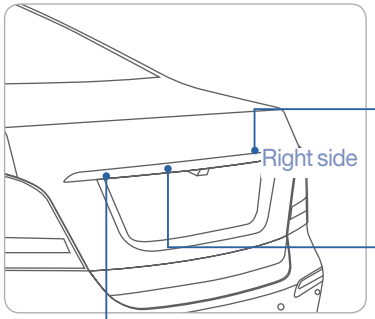

Power trunk open button



Press to open.
Smart key needs to be within range.

Power trunk open button on the smart key

Press and hold.

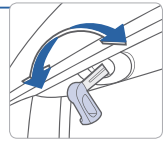

Use the mechanical key.

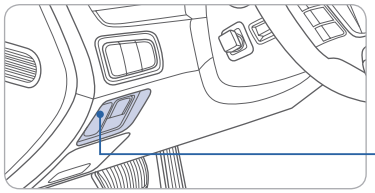

Power trunk main control button



Press to open.
Press and hold to close.

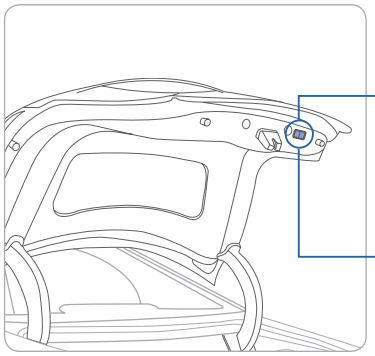

Power trunk close button



Press to close.

Power trunk lock button



Press to close the trunk and lock all doors and trunk.
Smart key needs to be within range.

NON-POWERED TRUNK

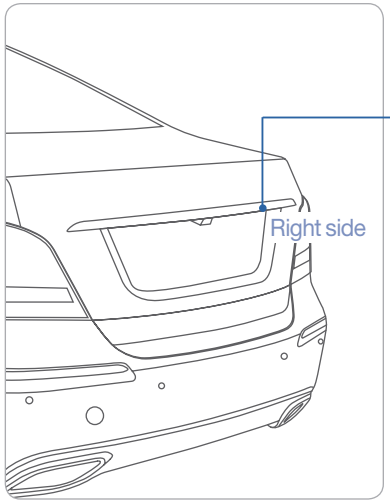

Unlock

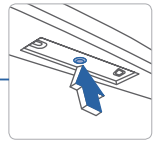

Press to open.
Smart key needs to be within range.

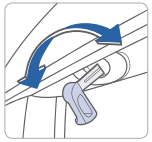

Use the mechanical key.

Press and hold.

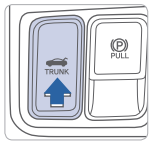

Press the release button in the vehicle.

TRUNK LOCK BUTTON

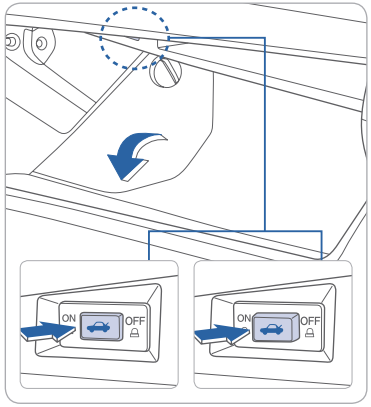

The trunk lock button is used to prevent unauthorized access to the trunk.

1. Open the glove box.
2. Press trunk lock button OFF.
   In the OFF position, the trunk can only be opened with the mechanical key.
3. Close and lock the glove box with the mechanical key.

NOTE Without the mechanical key, the smart key can only start the engine and operate door locks.

SEAT WARMER AND COOLER

Front seat

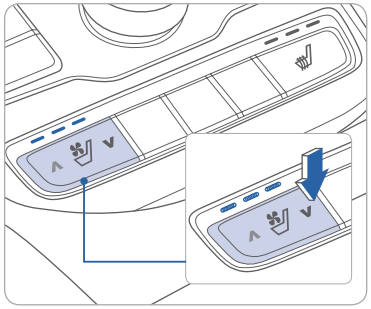

Push desired switch to warm or cool the seat.

OFF → HIGH → MIDDLE → LOW

The climate control system seat defaults to the OFF position.

Rear seat

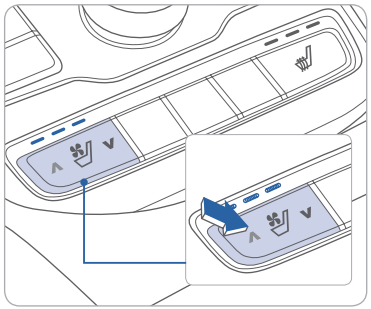

CHILD-PROTECTOR REAR DOOR LOCK

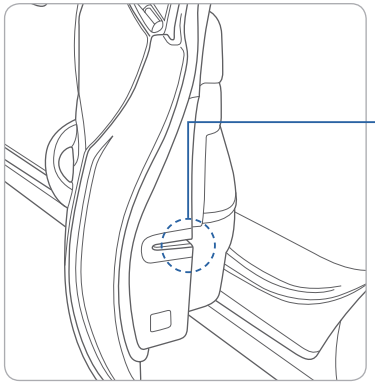

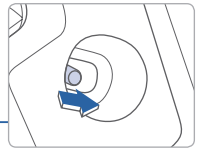

Lock ( )

Slide the child safety lock to the lock position.

Unlock ( )

Slide the child safety lock to the unlock position.

AUTOMATIC TRANSMISSION

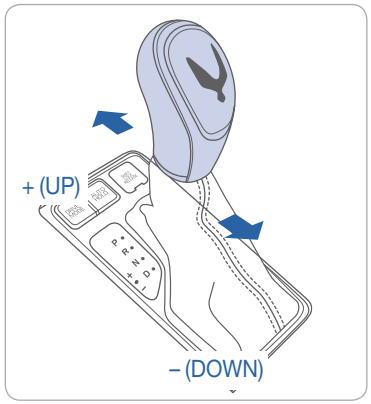

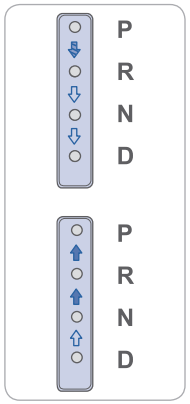

( ) : Depress the brake pedal and the lock release button when shifting.

( ) : The lock release button must be pressed while moving the shift lever.

( ) : The shift lever can be shifted without pressing the lock release button.

NOTE

Outside rearview mirrors will tilt down when in R (Reverse) if either L (left) or R (right) mirror control button is selected.

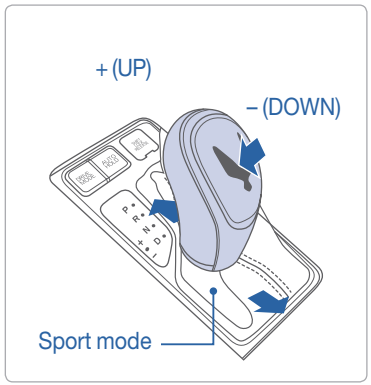

Sport mode

Move the shift lever to the left from the D (Drive) position.

Move the shift lever forward (+) to upshift or rearward (–) to downshift.

TIRE PRESSURE MONITORING SYSTEM (TPMS)

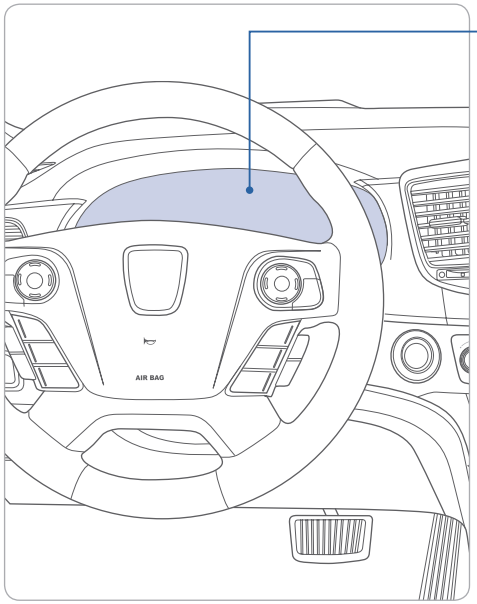

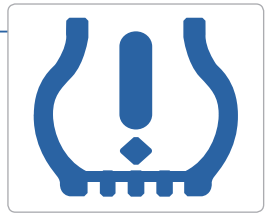

Low Tire Pressure Indicator/ TPMS Malfunction Indicator

Low Tire Pressure Position Indicator

LOW TIRE PRESSURE INDICATOR

Illuminates if one or more of your tires is significantly under-inflated.

TPMS MALFUNCTION INDICATOR

Blinks for approximately one minute, then remains illuminated when there is a malfunction with the TPMS system. Have the system checked by an authorized Hyundai dealer.

NOTE

When the low tire pressure indicator is illuminated, inflate tire to proper tire pressure as soon as possible. Tire pressure may vary in colder temperatures, causing the low tire pressure indicator to illuminate.

ELECTRONIC STABILITY CONTROL (ESC)

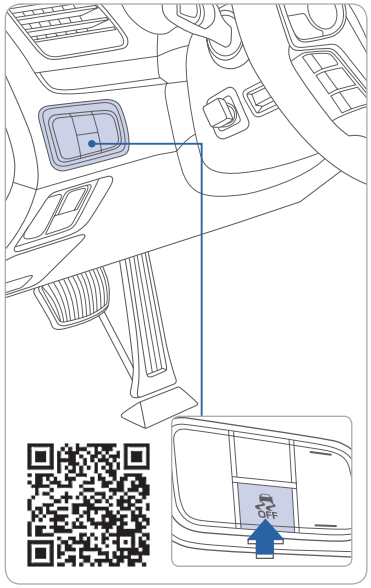

The ESC system is an electronic system designed to help the driver maintain vehicle control under adverse conditions.

Traction control off

To cancel ESC operation, press the ESC OFF button (ESC OFF) shortly (ESC OFF indicator light (ESC OFF) illuminates).

Traction & Stability Control off

To cancel ESC operation, press and hold the ESC OFF button (ESC OFF) for more than 3 seconds. ESC OFF indicator light (ESC OFF) illuminates, and ESC OFF warning chime will sound.

NOTE

It is recommended to always have the ESC system ON.

PARKING ASSIST SYSTEM (PAS)

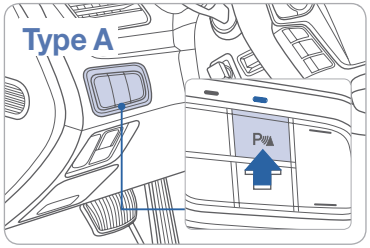

The parking assist system assists the driver during movement of the vehicle by chiming if any object is sensed within the distance of 100 cm in front and 120 cm behind the vehicle.

PAS ON/OFF

To turn the PAS off, press the ON/OFF button. To turn the PAS on, press it again.

If you move the shift lever to R with the engine start/stop button in ON and the parking assist system in OFF, the parking assist system will operate automatically.

NOTE

The parking assist system will turn off automatically after vehicle speed exceeds 11 mph.

REARVIEW CAMERA

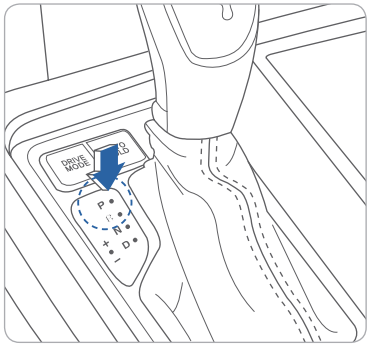

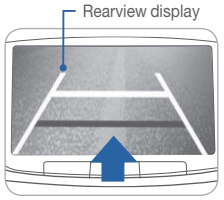

The rearview camera will activate when the ignition switch is ON and the shift lever is in the R (Reverse) position.

MULTI-VIEW CAMERA SYSTEM

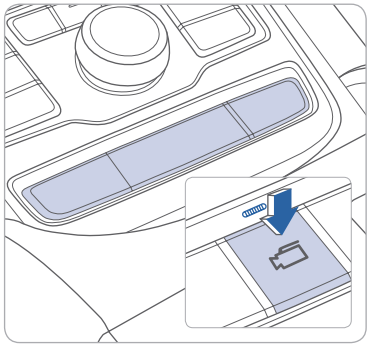

This parking support system displays an all-around view of the vehicle when parking. Press the switch to activate/deactivate the system.

Operating conditions

The shift lever is in D, N, or R position with the ignition ON

The vehicle speed is less than 12.4 mph

ELECTRIC PARKING BRAKE (EPB)

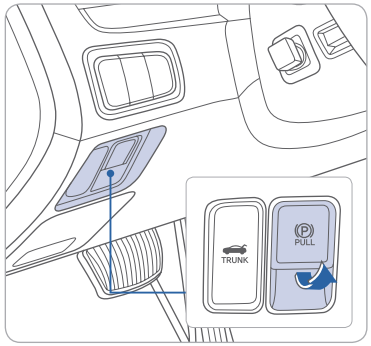

Applying

Depress the brake pedal and then pull the EPB switch.

Releasing

Press and hold the EPB switch with the brake pedal depressed or shift the shift lever from P to R or D.

AUTO HOLD

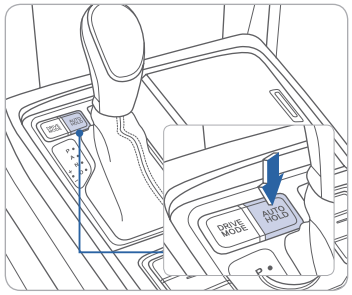

The Auto Hold feature assists in hill areas. It applies the brake until the accelerator pedal is pressed.

WHITE AUTO HOLD

1. Press the AUTO HOLD switch.

GREEN AUTO HOLD

2. Stop the vehicle by pressing the brake pedal. The brake will remain engaged even if the brake pedal is released.

WHITE AUTO HOLD

3. The brake pedal will release when the accelerator pedal is pressed with transmission in D or Sport Mode.

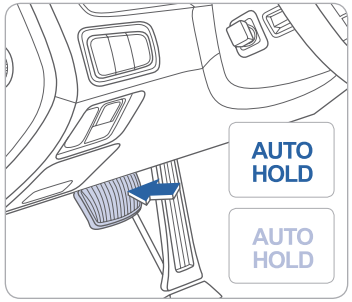

To cancel the AUTO HOLD operation, press the switch again with the brake pedal depressed.

ELECTRONIC CONTROLLED SUSPENSION (ECS)

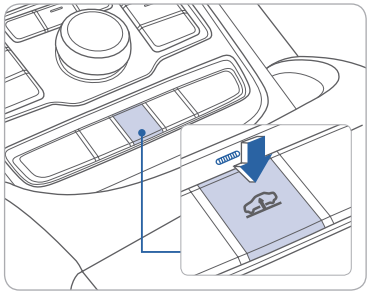

ECS controls the vehicle suspension automatically to maximize passenger comfort.

To control vehicle height manually, press the vehicle height control button to select the HIGH/NORMAL mode. You cannot select the HIGH mode if you drive over 42 mph.

NOTE Vehicle must be in Park.

HEAD UP DISPLAY (HUD)

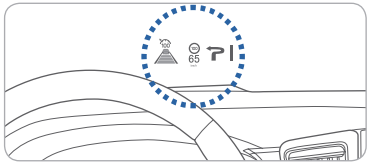

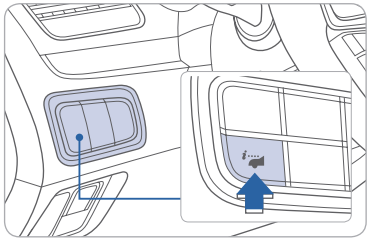

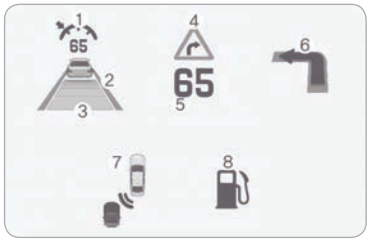

The head up display is a transparent display that projects information from the instrument cluster and navigation onto the windshield glass.

Press the HUD switch to activate/ deactivate the head up display.

Head up display information:

1. Cruise set speed
2. Lane departure warning system (LDWS)
3. Smart cruise control (SCC) – Distance
4. Road signs
5. Speedometer
6. Turn-by-turn (TBT) navigation
7. Blind spot detection(BSD) system
8. Warning lights (Low fuel, BSD)

LANE DEPARTURE WARNING SYSTEM (LDWS)

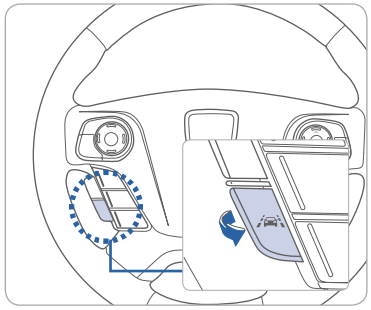

LDWS uses a sensor at the front windshield to help warn you when your vehicle leaves the lane.

Pull the LDWS switch to turn LDWS on/off.

LDWS operates only while the vehicle speed is over 43 mph.

BLIND SPOT DETECTION SYSTEM (BSD)

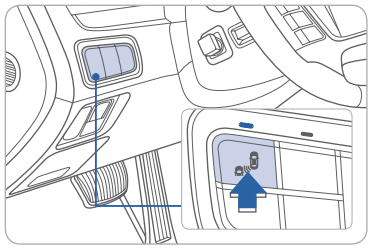

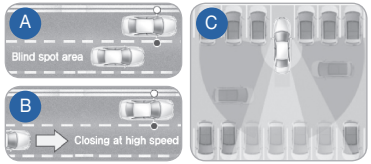

The BSD system sensor senses the rear side territory of the vehicle and provides information to the driver. Press the BSD switch. If vehicle speed exceeds 9.3mph the system will activate. Press the switch again to deactivate the system.

A Blind spot detection (BSD)
Warning range is dependent on your vehicle speed. However, if your vehicle speed difference is 9.3 mph above other vehicles, the warning is not active.

B Lane change assist (LCA)
When the vehicle is approaching at high speed, the warning is active.

C Rear cross-traffic alert (RCTA)
When your vehicle moves (below 6 mph) in Reverse, the sensor detects the approaching vehicles and the warning is active.

DRIVE MODE INTEGRATED CONTROL SYSTEM

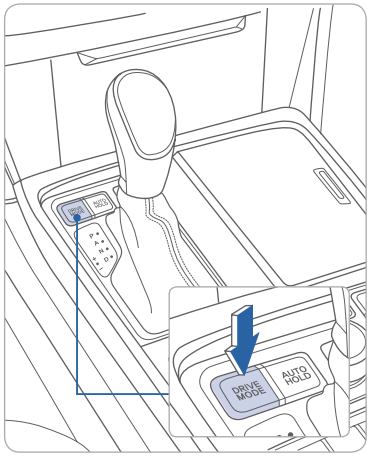

Press the DRIVE MODE switch to select the preferred drive mode.

System defaults to NORMAL mode at start, and the mode displayed on the instrument cluster changes as below.

ECO Normal/ECO mode
Illuminates in NORMAL mode when driving in ECO range.

SNOW SNOW mode
Optimizes driving dynamics by adjusting engine and transmission response for adverse weather conditions.

SPORT SPORT mode
Focuses on dynamic driving by automatically controlling the steering wheel, suspension (if ECS equipped), engines, and transaxle systems.

AUX, USB, AND iPOD® PORT

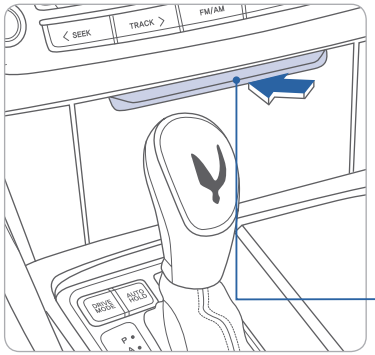

Use the jack to connect an external audio device and listen to it through the audio system speakers in your vehicle.

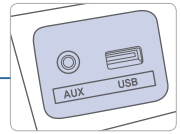

Program Coverage Summary

At Your Service Program is included for the first 3 years or 36,000 miles, whichever comes first.				
Complimentary Services	**Valet Services**	**Complimentary Rental Vehicle**	**Maintenance**	**Wear Items**
Equus Original Owner or Lessee	Yes	Yes	Yes	Yes
Equus Subsequent Owner or Lessee	Warranty Only	Warranty Only	No	No

See below for program terms and conditions.

VALET SERVICE

Valet service is available while your vehicle is receiving At Your Service free maintenance, wear items, or warranty repairs by an Authorized Equus Dealer. Simply contact your Authorized Equus Dealership's Service Advocate or contact the Equus Customer Connect Center at (877) 378-8727 to make your appointment. The dealership will work with you to arrange your pickup and delivery time and location.

- Valet appointments must be made at least 2 business days in advance.
- Valet area of coverage is valid only within an estimated 1 hour drive time distance (based on traffic, weather, and road conditions) from the participating dealership location to the pickup/delivery location.
- Valet pickup and delivery must occur during normal business hours. After-hours pickup and delivery are at the discretion of your participating dealership.
- You must notify your Equus Service Advocate 1 business day in advance if location or time of valet services changes. If a change or cancellation is not made at least 1 business day in advance, you may be charged a fee, or valet service may be cancelled.
- You will be charged a fee if you elect to extend the use of the courtesy replacement vehicle or delay the delivery of your vehicle.
- Prior to or at the time of pickup, you will need to provide your valet with the following information if a courtesy replacement vehicle is needed:
  - Insurance company name, policy number, and expiration date
  - Driver's license number, state, expiration, and birth date
  - Credit card number and expiration date (standard requirement for rental car use)
  - The above information for any additional drivers

Equus owner must provide the valet with an Equus that is currently registered in compliance with local and state laws. Road tolls incurred during the valet service may be charged to the vehicle owner.

COMPLIMENTARY RENTAL VEHICLE

We come to you and provide you with alternative transportation. While your vehicle is being serviced under this program, qualified drivers will be provided a courtesy replacement Hyundai Equus or Hyundai Genesis at no additional cost. You must be at least 25 years of age (in most states) with a valid driver's license to drive a replacement vehicle. Please provide your Service Advocate with the following information:

- Insurance company name, policy number, and expiration date
- Driver's license number, state, expiration and birth date
- Credit card number and expiration date (standard requirement for rental car use)
- The above information for any additional drivers

FREE MAINTENANCE AND WEAR COVERAGE

Vehicle Eligibility

For original retail owners of the 2014 Equus, we (Hyundai Motor America) cover all factory-recommended scheduled maintenance and normal wear parts replacement for the first 3 years or 36,000 miles, whichever comes first. The At Your Service Program is applicable to all 2014 model year Hyundai Equus United States specification vehicles purchased in the United States from Authorized Equus Dealerships. The program is not in effect outside of the United States.

- Vehicle coverage begins on the date of first retail sale. Fleet vehicles are excluded from this program.
- If the vehicle becomes damaged (such as by accident, fire, act of nature, etc.) and is subsequently titled salvaged, flooded, or reconstructed, it is no longer eligible for the benefits of the Equus At Your Service Program.

Guidelines for Scheduling Maintenance

The At Your Service Program covers normal factory-recommended scheduled maintenance for the first 3 years or 36,000 miles, whichever comes first. Severe use maintenance intervals are not covered by this program. Covered maintenance costs include all labor and parts necessary to complete the factory recommended service. Having your vehicle serviced at the specified time/mile intervals is critical in maintaining long-term durability. Failure to have your vehicle serviced at the specified interval may invalidate the warranty under certain circumstances.

If for any reason a service is missed, the Authorized Equus Dealership will perform the next or missed major service.

Some owners may wish to have their oil changed more frequently. The customer must pay for any additional services performed on the vehicle. Service procedures not specifically referenced in the Equus Customer Care Quick Reference Guide must be preauthorized by a Hyundai District Service Manager.

FREE MAINTENANCE AND WEAR COVERAGE (continued)

Guidelines for Normal Wear

The Hyundai Equus Maintenance Program includes coverage for specific items that may wear out under normal use (see below) for the first 3 years or 36,000 miles, whichever comes first. To qualify for replacement, the wear limit must be at or below the minimum service limits as specified by Hyundai Motor America technical reference manuals. Tires are excluded from this program.

Items covered under normal wear include:

- Front and rear brake pads
- Front and rear brake discs
- Windshield wiper blade inserts
- Battery

Exclusions from Coverage

The following items, without limitation, are not covered by the At Your Service Program:

- Gasoline and gasoline additives
- State inspections
- Wear and tear of soft trim, including seats, carpets, door casings, wood veneer, headliner, and all chrome trim
- Wear and tear or damage to exterior body panels, trim, and glass
- Damage due to poor fuel quality, misuse, abuse, neglect, fire, accident, flood, or installation of unapproved parts and accessories
- Vehicles used in competitive events
- Vehicles with an unreadable/tampered VIN, or where true mileage cannot be determined
- Repairs and maintenance not performed at an Authorized Equus Dealership
- Repairs covered under the Hyundai New Vehicle Limited Warranty
- Required maintenance and covered wear parts replacement on United States specification vehicles operating outside the United States

Transfer of Coverage

The described coverage only applies to the original retail purchaser or original lessee of a Hyundai Equus. The coverage is not transferable to subsequent owners, with the exception of immediate family members. Immediate family members include the following:

- Spouses or registered domestic partners
- Parents
- Children or stepchildren

Dealerships will verify that the owner/customer is the original owner/lessee. Certain limitations and exclusions apply to this program. Please refer to your New Vehicle Limited Warranty for warranty details.

KEY WEBSITES

Hyundai website - www.hyundai.com
Hyundai owner website - www.myhyundai.com
Bluetooth phone compatibility - www.hyundaiusa.com/bluetooth

Customer Date

EQUUS CUSTOMER DELIVERY CHECK LIST

HYUNDAI OWNER	DEALERSHIP NAME
SALES CONSULTANT	DATE
VIN	PREVIOUS VEHICLE

BEFORE DELIVERY

- ☐ CONFIRM “GOOD BATTERY” USING GR8 AND STAPLE TEST TICKET HERE
- ☐ SET TIRE PRESSURE LF___ RF ___ RR___ LR___
- ☐ VERIFY VEHICLE IS CLEAN, IN GOOD CONDITION, FREE OF CHIPS AND SCRATCHES · CLEAN WINDSHIELD AND BACK WINDOW
- ☐ ENSURE FLOORMATS ARE SNAPPED INTO PLACE

Sales Consultant Date

Sales Manager Date

Customer Date

@

Email